

I'm not a bot



Sharper image drone 004 manual

Sharper image drone instruction manual. Sharper image drone dro 004 manual. Sharper image drone controller instructions. Sharper image drone instructions. Sharper image drone not charging. Sharper image dx-4 drone manual pdf. Sharper image aero drone instructions. Sharper image glow stunt drone instructions.

1. Get ready to fly • Plug in your drone and let it charge before each use (charger cable included) • Indicator light will turn off when fully charged • Put batteries in remote control 2. Connect remote to drone: a. Turn drone on and place on flat surface b. Switch on remote, move left joystick up/down to pair c. Beep sound confirms successful pairing; repeat if needed 3. Remote control guide: a. Practice flying low (below 10ft) and slow until comfortable with all controls b. Left stick: spin & elevation controls, right stick: flight direction control c. Direction trimmer: use to stop drone from drifting d. To shut power off, move left joystick down Questions or concerns? Call us (800) 374-2744 for help. Please have 10-digit code from back of remote ready. Sharper Image logo and name are registered trademarks, owned by MerchSource LLC, CA. All rights reserved. For tech support visit www.merchsource.com or call 1-800-374-2744. Open the battery compartment on the aircraft and carefully remove the battery. Disconnect it from the battery cable and plug in a charging cable connected to a computer USB port. The LED will turn off, indicating charging. Once fully charged (about 1.5 hours), the LED will turn back on. Remove the battery when fully charged. Do not overcharge. In the transmitter's battery compartment, insert four AAA alkaline batteries (included) following the polarity diagrams. Close the compartment and ensure you're using fresh batteries; do not mix old and new ones. Pair the drone with the transmitter by turning it on, placing it on a flat surface, and pressing the power button. You'll hear a beep. Move the throttle level up and down to confirm pairing. The drone's LEDs will stop flashing when paired successfully. To lift off, press the "START/LANDING" button, then increase power by moving the throttle lever upward. Use the directional lever to control direction. For an emergency stop, pull both levers down and to the left. Headless mode allows for easier flying; turn it on with a dedicated button. To exit, press the button once more. To perform stunts or trimming adjustments, adjust the stick controls as needed. Auto hover mode is achieved by releasing the throttle lever at the desired altitude. This device complies with FCC Part 15 rules, subject to conditions that prevent harmful interference and accept any received interference. This device complies wif FCC Rules Part 15, which is designed to prevent harmful interference in a residential set up. It's supposed to not cause harm to other devices and accept any incoming interference. Any changes made without approval could void the user's ability to use it. This thingy has been tested and meets FCC standards for Class B digital devices. But, if used wrong, it might mess wif radio signals. If you notice weird interference, try movin the receiver or puttin the drone in a diff spot. Call 1(877) 210-3449 for help. Sharper Image stuff comes wif a 60-day warranty. Don't forget to charge the drone before use (USB cable included). Turn it on, pair it wif the remote (follow steps), and know the light colors mean front and back. Practice flying low and slow below 10 feet to avoid damage or hurt. Get ready to take your flying skills to new heights with the Sharper Image Streaming 2.4 GHz DX-4 HD Video Drone! This lightweight stunt drone is packed with features that will keep you entertained for hours. **Flight Controls:** * Right joystick controls flight direction * Direction Trim helps eliminate drift * To cut power, move left joystick down **Troubleshooting:** Have questions or concerns? Don't hesitate to reach out. Our customer service team is here to help you with any issues you may encounter. Simply call us at (800) 374-2744 and have your remote's 10-digit code handy. **Important Safety Information:** * Choking hazard - small parts not intended for children under 3 years * Adult assembly required **Introduction:** Congratulations on your purchase of the Sharper Image Streaming 2.4 GHz DX-4 HD Video Drone! With its advanced remote control maneuverability, you'll be able to master the art of drone flying and perform stunning stunts. **Specifications:** * Drone battery: 800 mAh Li-po * Remote controller battery: 6 x 1.5V AA * Charging time: approximately 120 minutes * Maximum recommended altitude: 150 ft **Table of Contents:** General Warnings | Contents and Remote Battery Installation | Charging Battery and Replacing Propellers | Remote Overview | Operating Drone Modes | Tips | FCC Warning